RF Single Color Wall Mounted Controller

09.2830A.04183


6

Product Data


FC CE PROHS 🚯 💿

Important: Read All Instructions Prior to Installation

Function introduction

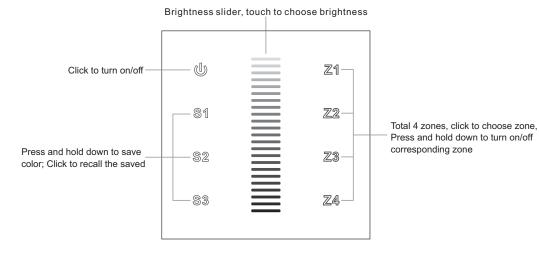

Front side

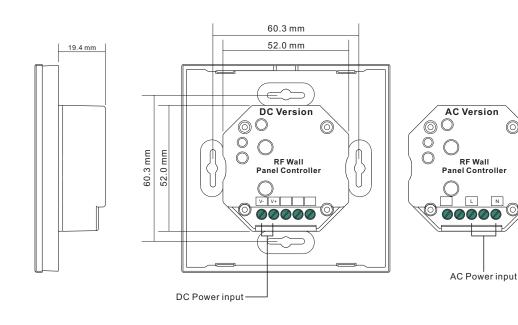

	DC Version	AC Version
Output Signal	RF signal	RF signal
Power Supply	12-24VDC	100-240VAC
Power consumption	200 mA	15 mA
Operating temperature	0-40°C	0-40°C
Relative humidity	8% to 80%	8% to 80%
Dimensions	86x86x29.1mm	86x86x29.1mm

Touch sensitive

- · Glass interface(white & black)
- · Compatible with all universal series RF receivers
- Control single color
- · Control 4 zone of RF receiver synchronously and separately
- Waterproof grade: IP20

Safety & Warnings

• DO NOT install with power applied to device.

0

0

• DO NOT expose the device to moisture.

Wiring diagram

DC Version

0

Ο

O

Õ

0

 \sim

 
RF Wall

Panel Controller

V- V+

00000

____ AC Version í@O Õ 0 Õ RF Wall Panel Controller 00000



AC Version

AC 100-240V

AC Power 50/60Hz

12-24VDC PSU

Operation

Pair with RF receivers:

Turn on the wall panel controller \rightarrow Click "Learning Key" \rightarrow Click a zone number on the wall panel controller:**Z1-Z4** \rightarrow Touch the brightness slider,

 \rightarrow LED lights connected with the \rightarrow The receiver is paired with RF receiver will flicker once the remote successfully.

Play the remote after pairing:

Turn on the wall \rightarrow Click the paired zone Touch brightness slider or other buttons to do the controlling.

How to delete the pairing:

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

Installation

