RF Dual Color Wall Mounted Controller

Important: Read All Instructions Prior to Installation

09.2836C.04219

Product Data

Output Signal	RF signal
Power Supply	3V(CR2032)
Power consumption	10 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	86x86x41.6mm


- Rotation sensitive
- Glass interface(white & black)
- · Compatible with all universal series RF receivers
- Radio frequency: 868/869.5/434MHz
- Control CCT color
- Control 1 zone of RF receiver
- Waterproof grade: Ip20


1. Decrease light intensity from 100% to 1%(brightness mode). 2. Change color temperature from warm white to cold white (dual color mode)


€ FC PC PROHS

Function introduction

Rotate the knob counterclockwise:

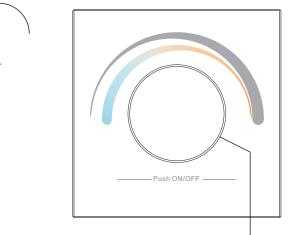

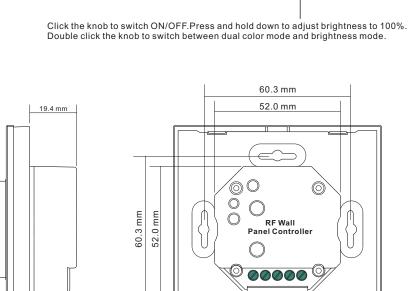

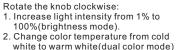


Safety & Warnings

• DO NOT install with power applied to device.

• DO NOT expose the device to moisture.

Pair with RF receiver

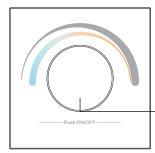

Step 1:Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.




Step 2:Click the "Learning Key" button on RF receiver to set it into pairing status

Step 3:Rotate or click the knob, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.

Installation

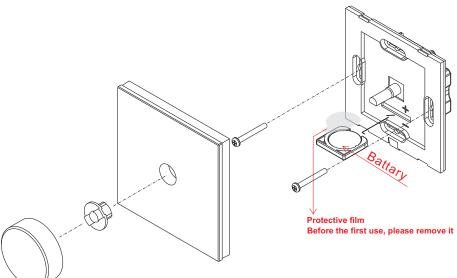

Back side