
# **RF RGB Remote Controller**


09.02839.04231



Important: Read All Instructions Prior to Installation

### **Function introduction**

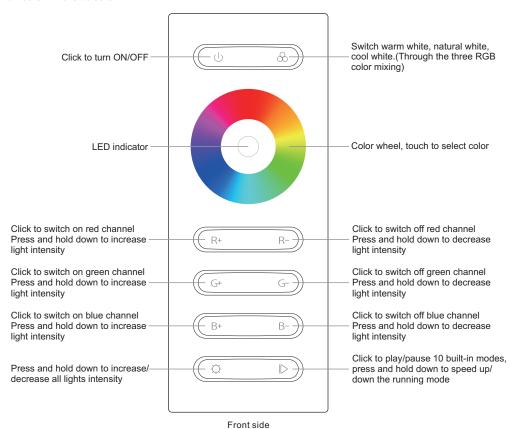

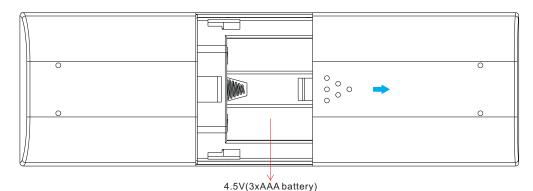

Back side

## Product Data


Output	RF signal
Operation Frequency	868/915/434MHz
Power Supply	4.5V(3xAAA battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	120x48x17.6mm

- Control 1 zone of RF receiver
- RGB color controller
- · Compatible with universal serie RF receiver
- 1 receiver can be paired by max 8 different remote controls.
- · Waterproof grade: IP20

## Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

#### Pair with RF receiver

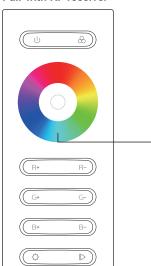

Step 1:Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.



Step 2:Click the "RF Code Key" button on RF receiver to set it into pairing status

Step 3:Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.